

Step-by-step

Step-by-step guide to windscreen replacement

Made with our K4600

Step 1



COBRAX^{PRO}

Drive onto the base of the lift.
This way the car acts as a counterweight for the lift and you can safely lift heavy windscreens.

Step 2



COBRAX^{PRO}

Max load 40 kg.

Step 3



COBRAX^{PRO}

You can adjust rotation speed by loosening or tightening these two screws with a hex key.

Step 4



COBRA X PRO

Now tip the folded arm forward so that it rests on the leveling glide.



Step 5



COBRA X PRO

Mount the other arm at the end of the one you just folded up. Pull out the pin and slide the arm in. (The pin holds the arm in place)



Step 6



COBRA X PRO

You can adjust the angle of the arm by loosening/tightening the leveling glide.

(To ensure that the arm is level)



Step 7



COBRA X PRO

Attach the blue strap to the eye bolt.

Only 1 strap included:
Extra long strap can be
bought separately




Step 8



COBRA X PRO

Set up the table by unfolding it and clicking on the aluminium bracket.
Adjust distance/placement of the table according to the arm.

Make sure that one end of the aluminium bracket is attached to the table, with cable ties. (They should already be secured)

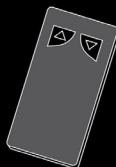

Step 9



COBRA X PRO


Mount the suction cup unit on the windscreen.

Step 10




COBRA X PRO

Attach the blue strap to the suction cup unit and adjust the U-bracket by loosening the screws.

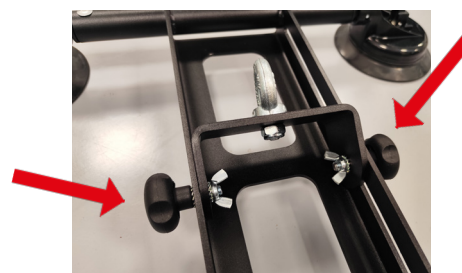

Step 11

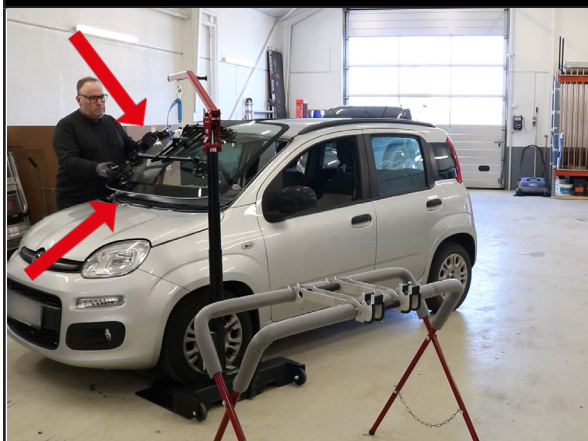


COBRA X PRO


Place the suction cups on the windscreen.



Now grab the suction cups and lift the windscreen by using the remote. The suction cups are there to manoeuvre the windscreen around.

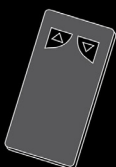

Step 12

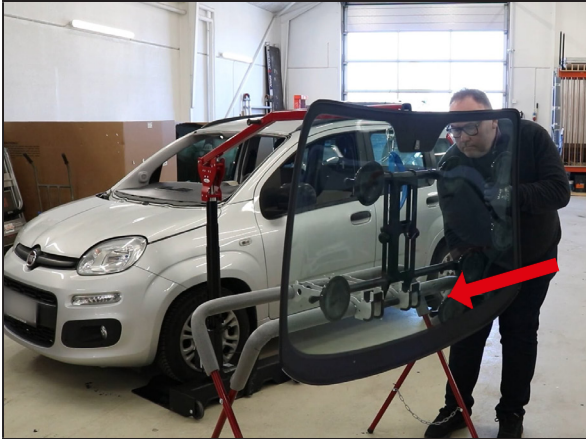


COBRAX^{PRO}

Carefully place the windscreen on the table.

The two "legs" on the suction cup unit go in between the brackets on the table - as seen on the image.

Lay the windscreen down on the table and remove it from the suction cups.

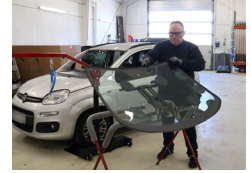


Step 13



COBRAX^{PRO}

Now Attach the new windscreen to the suction cup unit (and attach the suction cups).

And place the new windscreen in the frame.

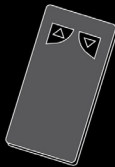

Step 14



COBRAX^{PRO}

When you're done with the lift, you can fold it back up for easier storage.

It is important to drive the lift all the way down before beginning the disassembly. This way you avoid damaging the lift.

Once you've done that, remove the arm extension and place it in the holder.

Now you can fold back the arm.

Enjoy your finished result!

Next page is Extension + troubleshooting

COBRAX^{PRO}

Step-by-step

Addition to: Step-by-step guide to windscreen replacement

K4635

Step 1



COBRAX^{PRO}

To attach the extension start by unscrewing the head.



Step 2



COBRAX^{PRO}

Remove the head.

Step 3



COBRAX^{PRO}

Unscrew the four screws with a hex key, and remove the shaft.

Step 4



COBRAX^{PRO}

Place the top part of the extension on the lift.



Step 5



COBRAX^{PRO}

Screw in the four included screws.

Step 6



COBRAX^{PRO}

Screw on the extension.

Step 7



COBRAX^{PRO}

Lock the extension in place by tightening the socket screw.

Step 8



COBRA X^{PRO}

Reattach the shaft.

Step 9



COBRA X^{PRO}

Screw it in place (all four screws).

Step 10



COBRA X^{PRO}

Reattach the head.

Step 11



COBRA X^{PRO}

Tighten the bolt at the top of the head.

Step 12



COBRAX^{PRO}

You have now extended your lift by 15cm.

The crane can be used like normal.

Step-by-step

Trouble shooting

Battery



COBRAX^{PRO}

If you're having issues with the lift, start by checking the battery level.

You can do that by pressing the button on the battery box.

Green lines indicate battery level.

Battery



COBRAX^{PRO}

If it needs charging, use the included cable.

Calibration



COBRAX^{PRO}

If you're still experiencing issues, try recalibrating the lift by pressing both buttons on the remote (at the same time) for 5 sec.

Calibration



COBRAX^{PRO}

Or remove and reinsert the bluetooth USB.

Remote



COBRAX^{PRO}

Alternitavely (or if you prefer this method in general) you can attatch the smaller remote at the bottom of the control bot.

Or use the app Desk control.

COBRAX^{PRO}