

Step-by-step

Step-by-step guide on how to use the UV lamp

Made with our K4215A

Step 1



COBRA[®]X^{PRO}

Turn on the lamp by pressing the on/off button.

Step 2



COBRA[®]X^{PRO}

Check the battery level by pressing the bat./sec. button.

4.1 means it is fully charged.

3.6 means it needs to be charged.

Step 3



COBRA[®]X^{PRO}


To turn on the LEDs (on the bottom of the lamp) you press the LED-button.

By pressing it once, you turn on the middle 2 LEDs. This function is enough to cure a stone chip, and preserves battery life.

If you press it twice it turns on all 10 LEDs. This function is generally meant for curing cracks but can also be used for stone chips.



Step 4

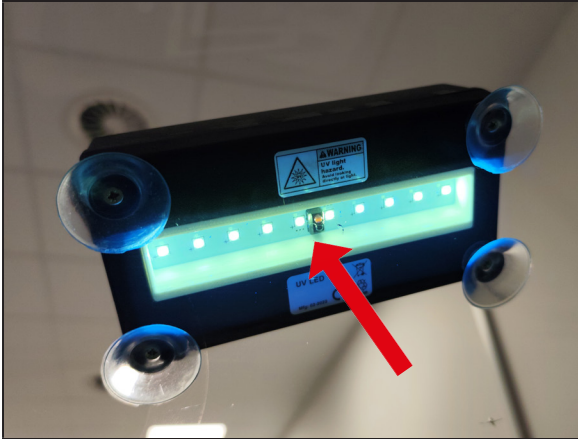

COBRAX^{PRO}

Here you can see the safety switch.
The lamp only works when on the glass, as the safety switch prevents eye damage.

Should you by accident turn it around while it is on, no need to worry. It will turn off by itself.

Note: If the lamp overheats, it is not possible to start a new cycle until it cools down.

Step 5



COBRAX^{PRO}

Charge the Lamp with the included USB-cable.

The green light means it is charging.

Enjoy your finished result!

COBRAX^{PRO}